


# GENERAL EXPLODED VIEW

THE GENERAL DESIGN AND PARTS SHOWN WILL VARY TO INDIVIDUAL UNITS COVERED ON THIS INSTRUCTION SHEET

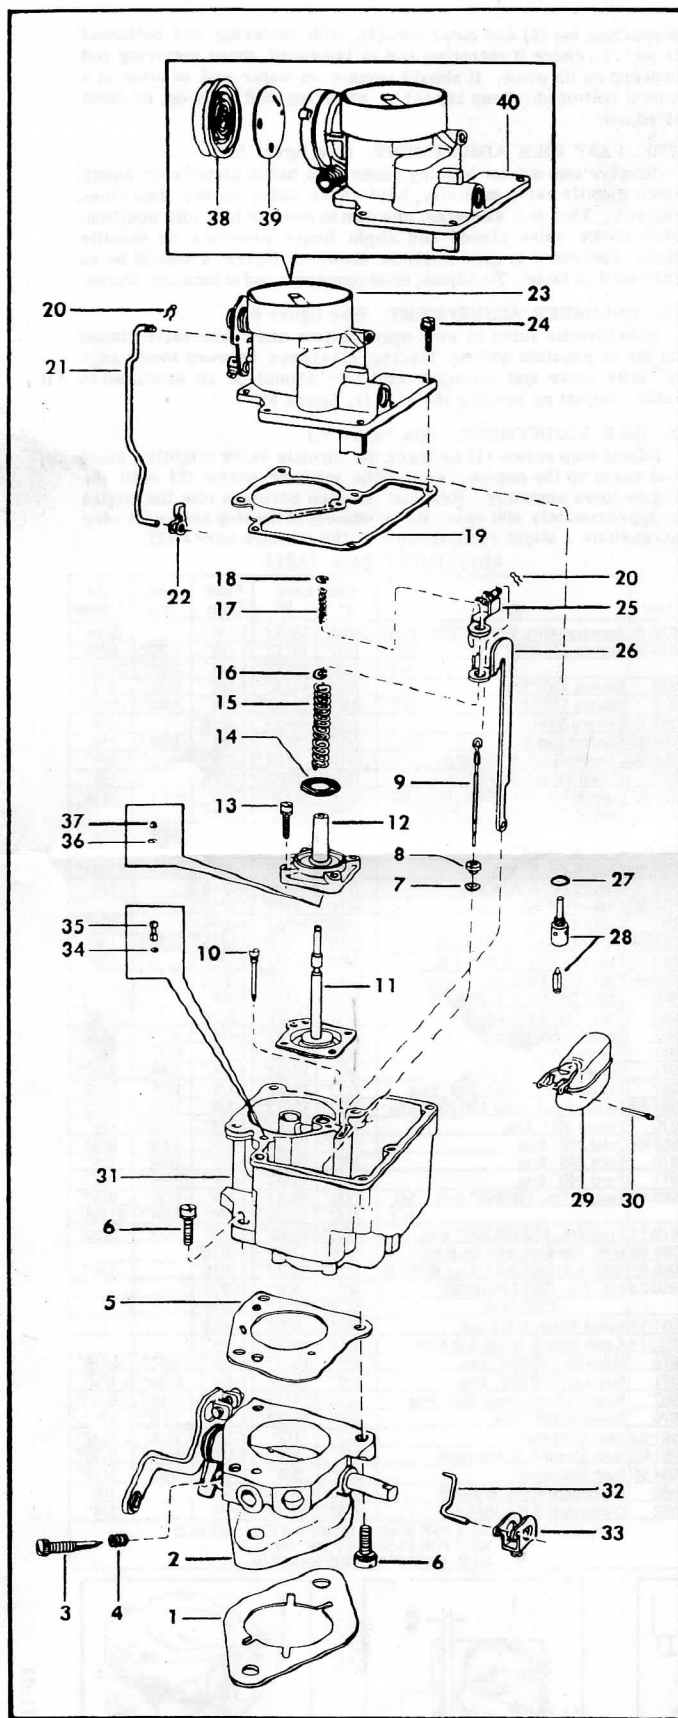

Ref. No.

NOMENCLATURE

- 1 Gasket - Body flange. . . . .
- 2 Flange Assembly - Body . . . . .
- 3 Screw - Idle adjusting. . . . .
- 4 Spring - Idle adjusting screw . . . . .
- 5 Gasket - Body flange. . . . .
- 6 Screw and Washer Assembly - Body flange. . . . .
- 7 Gasket - Metering rod jet . . . . .
- 8 Jet - Metering rod . . . . .
- 9 Rod - Metering . . . . .
- 10 Jet - Low speed. . . . .
- 11 Diaphragm Assembly - Pump. . . . .
- 12 Housing - Pump diaphragm . . . . .
- 13 Screw and Washer Assembly - Diaphragm housing . . . . .
- 14 Strainer - Pump intake . . . . .
- 15 Spring - Pump diaphragm . . . . .
- 16 Retainer - Diaphragm spring . . . . .
- 17 Spring - Upper pump . . . . .
- 18 Retainer - Upper pump spring . . . . .
- 19 Gasket - Bowl cover. . . . .
- 20 Spring - Pin . . . . .
- 21 Rod - Choke connector . . . . .
- 22 Retainer - Connector rod . . . . .
- 23 Air Horn Assembly . . . . .
- 24 Screw and Washer Assembly - Air horn. . . . .
- 25 Arm Assembly - Metering rod . . . . .
- 26 Link - Pump lifter . . . . .
- 27 Gasket - Needle seat . . . . .
- 28 Needle and Seat Assembly . . . . .
- 29 Float Assembly . . . . .
- 30 Pin - Float . . . . .
- 31 Main Body . . . . .
- 32 Link - Pump connector . . . . .
- 33 Arm Assembly - Throttle shaft . . . . .

The following parts are not used on all models

- 34 Ball - Pump discharge . . . . .
- 35 Weight - Pump discharge ball . . . . .
- 36 Retainer - Pump intake ball . . . . .
- 37 Ball - Pump intake . . . . .
- 38 Housing - Thermostat . . . . .
- 39 Gasket - Thermostat housing . . . . .
- 40 Air Horn Assembly . . . . .