

6.010 BRACE, Front Suspension Cross Member		
1	39/10..(right).....	599156
1	39/10 (left).....	599155
4	Rivet, rd. hd. 5/16x3/4; 39/10.	104097
6.020 KNUCKLE, Steering (with bushing and nut)		
2	37/GB Except (-23); 38/12 except (-23); 39/12.....	1789659
2	37/GB (-23), GC-SH; 38/12 (-23) 13,14; 39/13-14.....	1789755
2	37/SA-SD (first jobs - front brake flange bolt 7/16" dia.)	601474
2	37/SA-SD (after jobs - front brake flange bolt 1/2" dia.); 38-39/15.....	602698
2	39/10.....	603387
1	39/18 (right).....	603270
1	39/18 (left).....	603269
6.021 BUSHING, Steering Knuckle		
4	37/GA; 38-39/10.....	602124
A.R.	37/GA; 38-39/10 (.0145 oversize) (to be used where king pin brg. bore has been reamed oversize)	603076
4	37/GB Except (-23); 38/12 except (-23); 39/12.....	593044
4	37/GB (-23), GC-SH; 38/12 (-23) 13-14; 39/13-14.....	352210
4	37/SA-SD; 38-39/15.....	365312
2	39/18 (upper).....	2073641
2	39/18 (lower).....	2077066
6.021 BUSHING, Front Spindle to Flange Plate		
2	37/GA; 38/10.....	600864
6.022 NUT, Steering Knuckle Spindle		
2	37/GA; 38-39/10.....	1765429
2	37/GB-GC-SH; 38-39/12-13-14;	352917
2	37/SA-SD; 38-39/15.....	379656
2	39/18.....	374427
6.023 SUPPORT, Steering Knuckle		
1	39/10 (right).....	599190
1	39/10 (left).....	599189
2	Bolt, hex. hd. 3/8-24x1 7/8; 39/10.....	109856
2	Nut, hex. 3/8-24; 39/10.....	103026
6.039 ADAPTER, Front Spindle Grease Fitting		
2	37/GA; 38/10.....	496811
6.103 ARM, Steering Knuckle		
1	37/GA; 38/10 (L.H.D.).....	373487
1	37/GA; 38/10 (R.H.D.).....	373486
1	37/GB Except (-23); 38/12 except (-23)(L.H.D.).....	593051
1	37/GB Except (-23); 38/12 except (-23)(R.H.D.).....	593052
1	37/GB (-23), GC-SH (L.H.D.).....	373541
1	37/GB (-23)-GC-SH (R.H.D.).....	373542
1	37/SA-SD first jobs (7/16" holes)(L.H.D.).....	377985
1	37/SA-SD first jobs (R.H.D.) (7/16" holes).....	377986
1	37/SA-SD after jobs 38-39/15 (L.H.D.)(1/2" holes).....	596567
1	37/SA-SD after jobs 38-39/15 (R.H.D.)(1/2" holes).....	596568
6.103 ARM, Steering Knuckle		
1	38/12 (-23), 13-14; 39/13-14 (L.H.D.).....	1791863
1	38/12 (-23), 13-14 39/13-14 (R.H.D.).....	1791864
1	39/10 (L.H.D.)(right).....	599204
1	39/10 (L.H.D.)(left).....	599203
1	39/10 (R.H.D.)(right).....	599206
1	39/10 (R.H.D.)(left).....	599205
1	39/12 (L.H.D.).....	1794573
1	39/12 (R.H.D.).....	1794574
1	39/18 (L.H.D.).....	678016
1	Key, woodruff 3/16x3/4; 37/GA; 38/10.....	124549
1	Screw, set; 39/18.....	3652251
6.103 ARM, Steering and 3rd		
1	37/GA; 38/10 (L.H.D.).....	593233
1	37/GA; 38/10 (R.H.D.).....	593234
1	37/GB Except (-23); 38/12 except (-23) and kick shackle jobs (L.H.D.).....	593055
1	37/GB Except (-23); 38/12 Except (-23)(R.H.D.).....	593056
1	37/GB (-23) GC-SH (L.H.D.).....	593405
1	37/GB (-23) GC-SH (R.H.D.).....	593406
1	37/SA-SD first jobs (L.H.D.) (7/16" holes).....	593411
1	37/SA-SD first jobs (R.H.D.) (7/16" holes).....	593412
1	37/SA-SD after jobs 38-39/15 (L.H.D.)(1/2" holes).....	596575
1	37/SA-SD after jobs 38-39/15 (R.H.D.)(1/2" holes).....	596576
1	38/12 Kick shackle jobs (L.H.D.)	1792784
1	38/12 (-23)-13-14; 39/13-14 (L.H.D.).....	1804783
1	38/12 (-23)-13-14; 39/13-14 (R.H.D.).....	1804784
1	39/12 (L.H.D.).....	1794575
1	39/12 (R.H.D.).....	1794576
1	39/18 (L.H.D.).....	096016
1	Nut, steering arm ball; 39/18 (6.109).....	291672
1	Key, woodruff 3/16x3/4; 37/GA; 38/10.....	124549
1	Screw, set; 39/18.....	3652251
6.104 NUT, Steering Knuckle Arm		
2	37/GA; 38/10 (3/4-16).....	374427
2	39/18.....	315070
6.105 KEY, Steering & Third Arm		
2	39/18.....	3651215
6.108 BALL, Steering Knuckle Arm		
1	39/18 (1" dia.).....	094602
6.109 NUT, Steering Arm Ball		
2	39/18.....	291672
6.111 COVER, Tie Rod Dust		
2	37/SA-SD; 38-39/15.....	231957
2	38/12 (-23)-13-14; 39/12-13-14.	1792491
4	39/10.....	599245
6.112 SPRING, Tie Rod End Dust Seal		
2	39/18.....	671345